

# CABIN AIR FILTER – INSTALLATION INSTRUCTIONS

Est. Installation Time: less than 15 min.

The Cabin Air Filter is located behind the glove box.

1. Using a philips screwdriver, remove the 2 screws at the bottom of the bottom of the glove box
2. Open the glove compartment and remove the 4 screws across the top of the glove compartment (2 in the center are securing the latch) – Fig. 1
3. Slowly pull out the glove box assembly. Hold once you see the wires and light module




**WARNING: DO NOT LET THE GLOVE COMPARTMENT HANG BY THE AIR BAG MODULE WIRES. DO NOT PULL ON THE AIR BAG MODULE WIRES. DO NOT DISCONNECT THE AIR BAG MODULE WIRES.**

4. Unclip the airbag sensor from the box assembly utilizing a plier – Fig. 2. Detach the light modular.
5. Remove the glove compartment assembly from the dashboard and set aside.



6. Locate the filter housing cover. Using a flat screwdriver, unclip the metal clip at the lower side of the cover
7. Slid the cover up to disengage it and remove it
8. Pull out the two old filters and clean the housing
9. Insert the first filter with the "X" plastic shape facing the driver side. Slid the first filter up and insert the second new filter
10. Close the housing cover, slide it down and secure it with the metal clip.
11. Connect the light wires. Snap back the airbag sensor module.
12. Follow the reverse steps to install the glove box assembly and secure it with the 6 screws

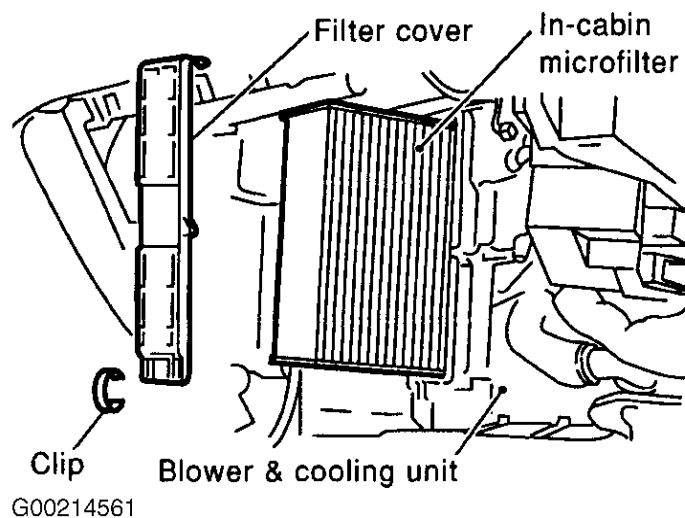

This is only a guide and may not be for exact model. See Owner's manual and/or local Technician for exact instructions for the particular model.