CABIN AIR FILTER - INSTALLATION INSTRUCTIONS

Est. Installation Time: less than 15 min.

The Cabin Air Filter is located behind the glove box.

- 1. Open the glove box and locate the damper on the right side Fig. 1
- 2. Unclip the damper with your fingers
- Remove the two rubber stop blocks from each side of the glove box. First pull the glove box towards you. Then pull the front edge in toward the inside of the glove box and pull it out to remove it – Fig. 2
- 4. Remove the glove box damper by gently pulling the mounting pin out, then feed the mounting pin through the hole Fig. 3. Hold/support the glove box to prevent it from swinging wide open when the damper is removed. Lower the glove box.
- 5. Press together the two tabs, of the clips securing the housing cover (one on the right and another on the left side) and pull it out
- 6. Pull out the old filter, clean the housing
- 7. Insert the new filter with the air flow arrow pointing down
- 8. Install the housing cover
- 9. Engage the stoppers (revers step 5)
- 10. Engage the damper on the right side.



Figure 1



Figure 2



Figure 3

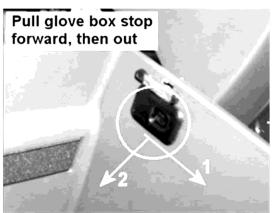


Figure 4

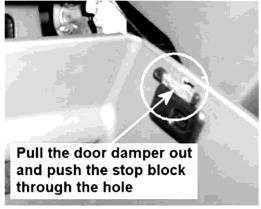


Figure 5

This is only a guide and may not be for exact model. See Owner's manual and/or local Technician for exact instructions for the particular model.