

CABIN AIR FILTER – INSTALLATION INSTRUCTIONS

Part No.: **PC5426X**

Est. Installation Time: **less than 20 mins**

Toyota/Lexus OE: 87139-30010

The Cabin air filter is located behind the glove compartment

- Open hood and disconnect and isolate the battery ground cable. Allow at least 1-1/2 minutes for the air bag backup power to discharge. Leave cable disconnected while doing this procedure (Discard this step if the vehicle is not equipped with Airbags)
- Open the passenger side door and remove the screws securing the glove box to the dash panel
- Open the glove box and remove the three-glove box retaining screws inside the glove box.
- Locate the cabin filter plastic cover and remove it
- Remove the old cabin air filter, taking note the air flow arrow indicator on the side of the old filter (Fig 4)
- Insert the new filter into the housing, making sure the air flow direction is correct according to the arrow indicator
- Replace the rest of the glove box assembly by reversing the removal procedure

This is only a guide and may not be for exact model. See Owner's manual and/or local mechanic for exact instructions for the particular model.