

# CABIN AIR FILTER – INSTALLATION INSTRUCTIONS

Part No.: **PC99471X**

Est. Installation Time: **less than 15 min**

**OE: 68410725AA**

The Cabin air filter can be accessed from the passenger side footwell

- Disconnect and isolate the negative battery cable. If equipped with an Intelligent Battery Sensor (IBS), disconnect the IBS connector first before disconnecting the negative battery cable.
- Remove the passenger side silencer panel
- Remove the passenger side console closeout.
- Carefully disengage both retaining clips (2) simultaneously from the HVAC housing (1) and then remove the filter cover. (Fig 1)
- Locate the plastic panel under the glove box
- Remove the cabin air filter (2) from the right side of the HVAC housing (1) by pulling the filter element straight out of the housing. Take note of the air filter position indicators. (Fig 2)
- Insert the new filter into the assembly, making sure the air flow direction is correct according to the arrow indicator
- Replace the rest of the glove box assembly by reversing the removal procedure

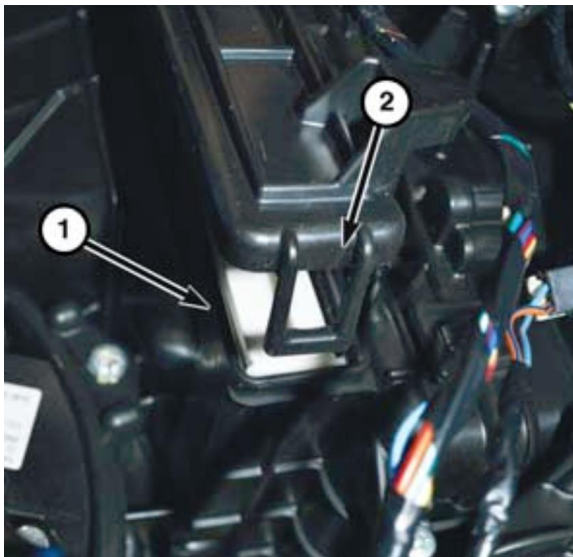


Figure 1

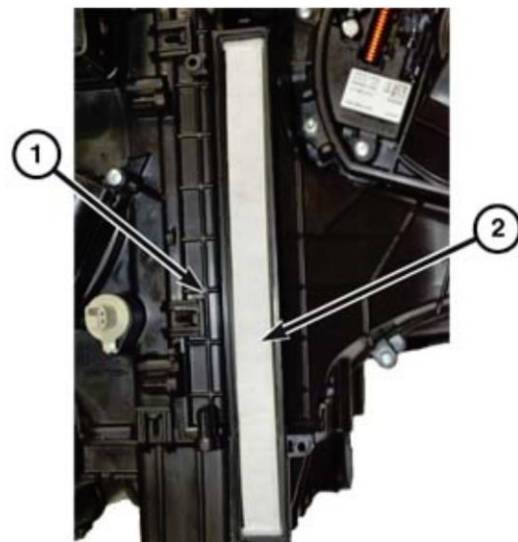


Figure 2

This is only a guide and may not be for exact model. See Owner's manual and/or local mechanic for exact instructions for the particular model.