

CABIN AIR FILTER – INSTALLATION INSTRUCTIONS

Part No.: PC4258X

Est. Installation Time: less than 20 min

BMW OE: 64319312318

- Open the hood
- Remove sealing lips at marked points. Unclip line and water hose (1) from cover (3). Unlock retaining lug (2). Feed out cover (3) (Fig 1)
- Remove the filter by lifting upward to remove (Fig 2)
- Remove the upper microfilter from the tray (Fig 3)
- Unclip filter frame (1) at the marked points and detach. Remove lower microfilter (2) in direction of arrow (Fig 4)
- Insert the new filters into the tray, making sure it is seated and secure in the tray properly and the air flow direction is correct according to the arrow indicator
- Replace the rest of the glove box assembly by reversing the removal procedure

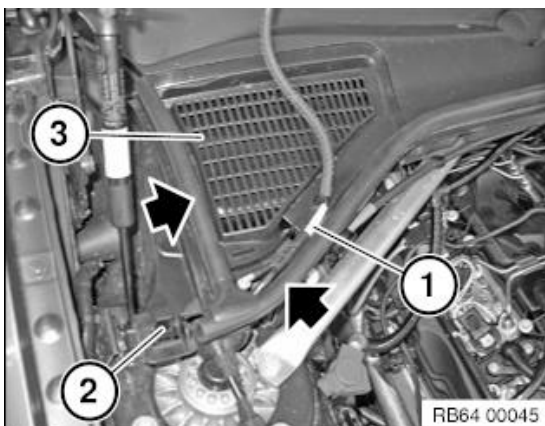


Fig 1

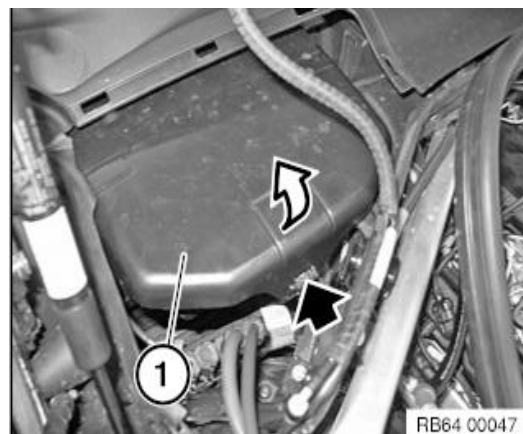


Fig 2

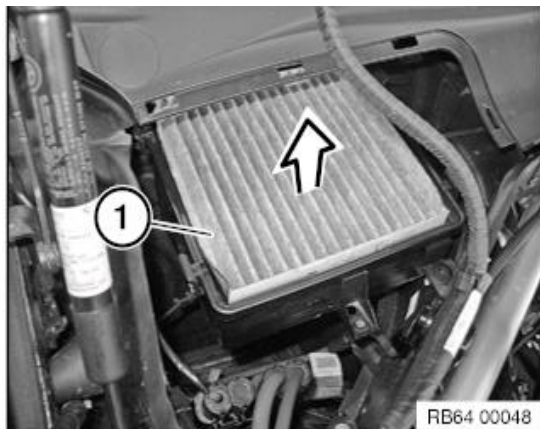


Fig 3

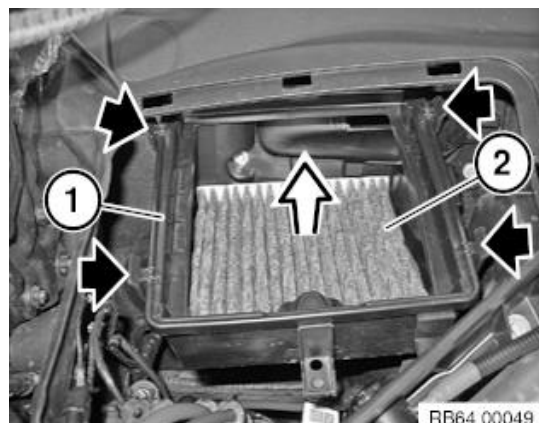


Fig 4

This is only a guide and may not be for exact model. See Owner's manual and/or local mechanic for exact instructions for the particular model.