

CABIN AIR FILTER – INSTALLATION INSTRUCTIONS

Part No.: **PC5473X**


Est. Installation Time: **less than 30 min.**

Audi A6 (1998-00)


OEM No. 4B0819439

The cabin air filter is located under the cowl cover panel, on the passenger side.

1. Open the hood
2. Pull the rubber gasket off toward front.
See →
3. Remove plenum chamber cover (1) toward front. See
4. When installing, place plenum chamber cover carefully into the water deflector below the windshield so no water can run into the dust and pollen filter
5. Release catches on tab (A) and fold back tab. See below
6. Remove old filter from the housing.
7. Clean the housing
8. The new filter should be installed correctly in frame (C). Arrows (B) on edge of filter should face in direction of air flow.

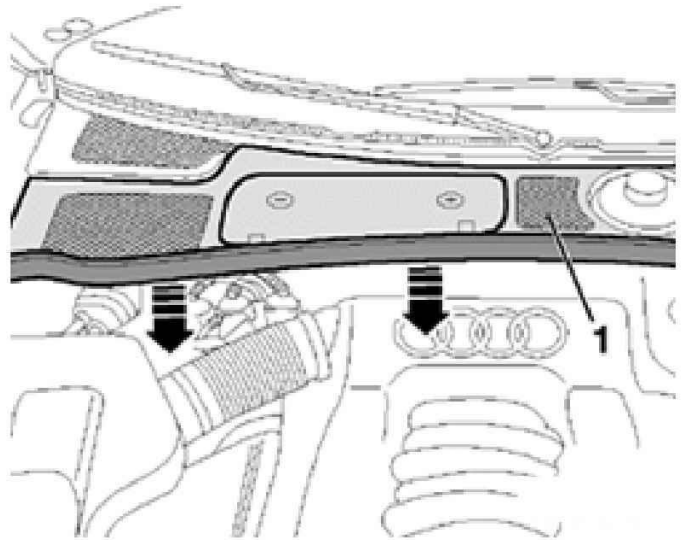

G02720343

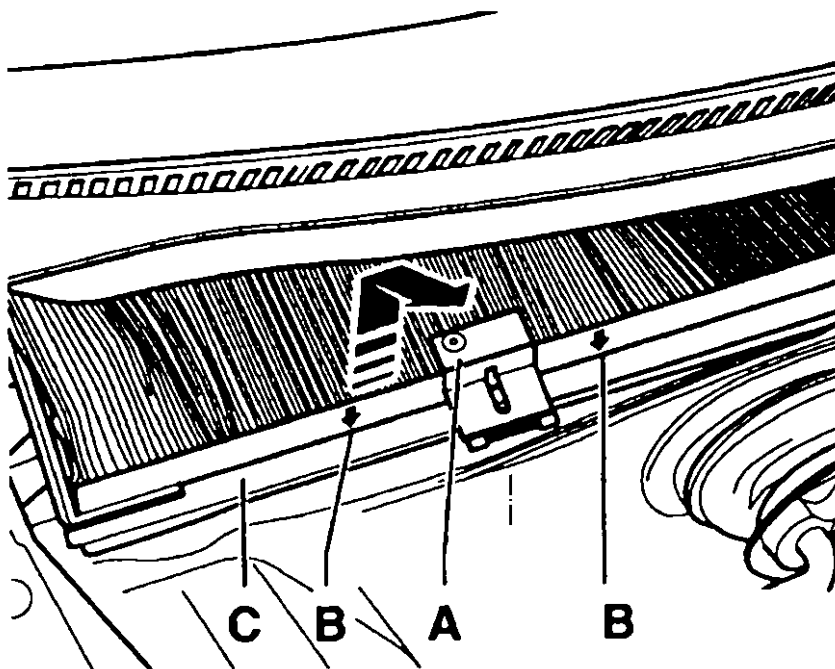

G00213218

Be sure to install plenum chamber cover carefully into the water deflector below the windshield so no water can run into the filter housing