

CABIN AIR FILTER – INSTALLATION INSTRUCTIONS

Part No.: PC5623X

Est. Installation Time: less than 10 min

**Chevrolet- Corvette V8 6.0(05-07), CorvetteV8 6.2(08-18), Corvette V8 7.0(06-13)
Cadillac-XLR V8 4.4(06-09), XLR V8 7.0 (06-13)**

The Cabin air filter is located under the windshield wipers on the passenger's side

- Open Hood
- Unlash the three tabs on the top of the housing cover and remove it. (Fig 1 and 2)
- Lift up and remove the old cabin air filter from the housing. (Fig 3)
- Squeeze in the middle the new cabin filter and insert it into the housing with the air flow indicator pointing down
- Insert back in place the cabin air filter housing cover and secure it with the tabs
- Close the hood

Fig 1




Fig 2



Fig 3



Fig 4

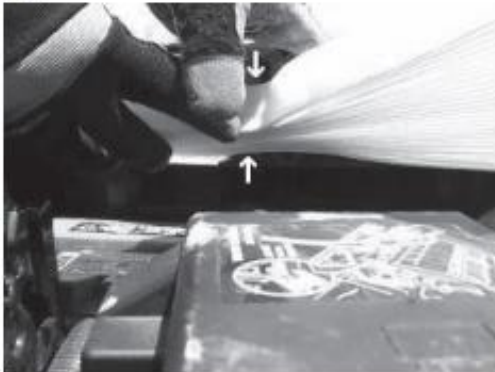

This is only a guide and may not be for exact model. See Owner's manual and/or local mechanic for exact instructions for the particular model.