



CABIN AIR FILTER – INSTALLATION INSTRUCTIONS

Part No.: **PC5770X** Est. Installation Time: **less than 20 min.**

Mercedes 300, 400, 500 E , CE & D Series (1990-95) OEM No 124 835 0047

The cabin air filter is located under the hood under the cowl cover in the center – 2 filters

1. Open the hood and remove the 3 weather strips
2. Remove cowl cover -2 pieces each is secured with 2 phillips screws
3. Remove the ventilation cover

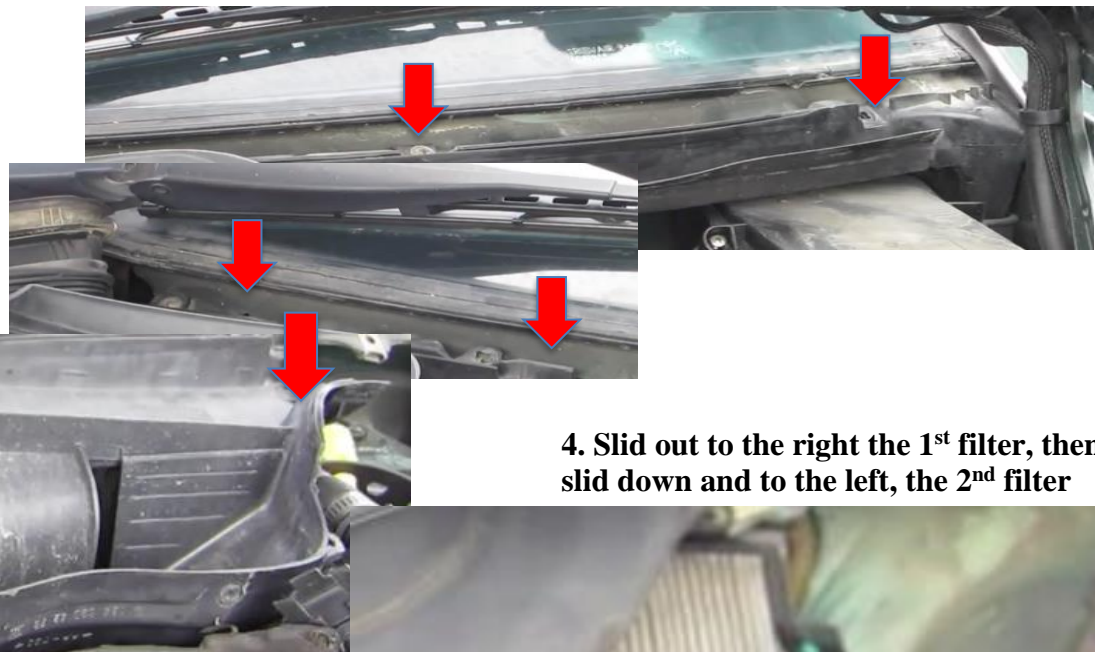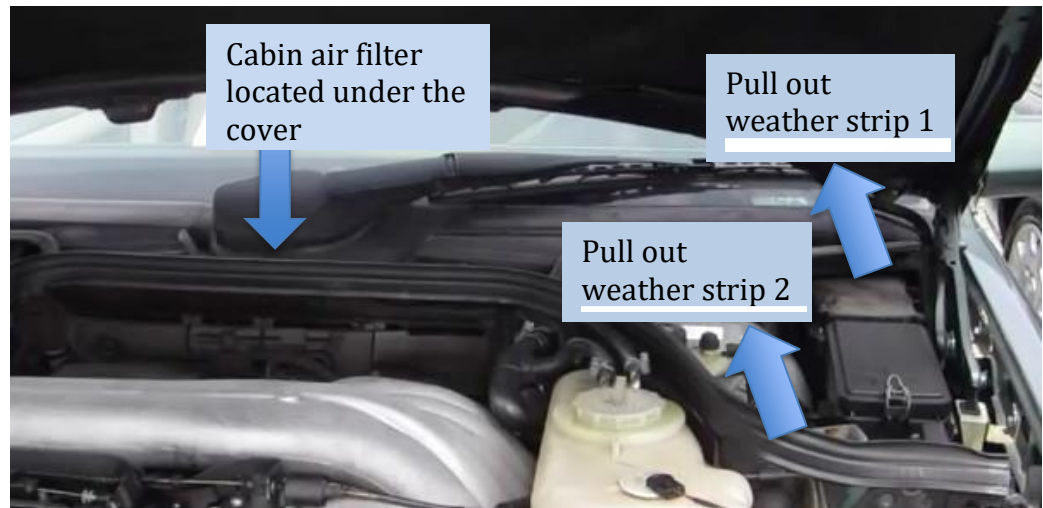

4. Slid out to the right the 1st filter, then slid down and to the left, the 2nd filter



5. Clean the housing
6. Insert the 1st filter and slid it up. Slid in the 2nd filter. Make sure the ridges on the side of the filters are engage
7. Revers steps 3-1