

CABIN AIR FILTER – INSTALLATION INSTRUCTIONS

Part No.: **PC8153X**

Est. Installation Time: **less than 15 mins**

Mercedes Benz – CL65 AMG, CL500, CL600; E55, E300D; E320; E420, E430; S55, S55 AMG, S65, SL600

The Cabin air filter is located behind the glove compartment on the passenger side of the vehicle

- Remove the six screws holding the glove box in place
- Remove all the inside glove compartment screws, from top, bottom, left and right
- Remove locking tabs from left and right side of glovebox compartment
- open the filter housing door by sliding the locking latch
- Remove door
- Remove old filter by sliding it to the opening and pulling straight out, taking note the air flow arrow indicator on the side of the old filter
- Insert the new filter into the housing, making sure it is seated and secure in the housing properly and that the air flow direction is correct according to the arrow indicator
- Replace the rest of the glove box assembly by reversing the removal procedure



Fig 1

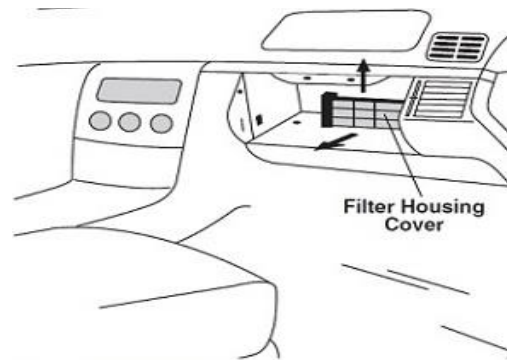


Fig 2

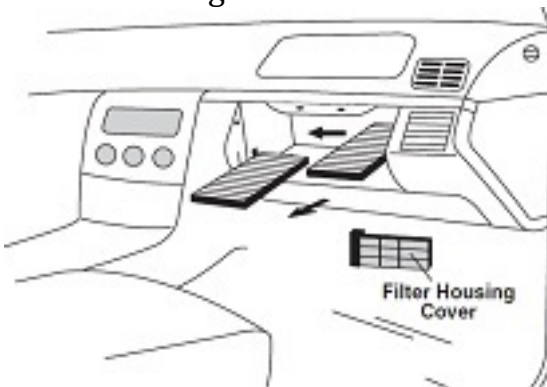


Fig 3



Fig 4

This is only a guide and may not be for exact model. See Owner's manual and/or local mechanic for exact instructions for the particular model.