

# CABIN AIR FILTER – INSTALLATION INSTRUCTIONS

Part No.: **PC9353X**

Est. Installation Time: **less than 10 min.**

Kia Spectra (2005-09), Borrego (2009-11)

OEM No. 97133-2F000

**The cabin air filter is located behind the glove compartment.**

1. Open the glove box
2. Remove the tension cord on the right side of glove box – Fig. 1
3. Push both sides of the glove box inward to disengage the stoppers.
4. Allow the glove box to swing down towards the floorboard. This will allow access to the cabin filter housing.
5. Locate the cabin filter plastic cover. Unlock it by pressing inward on the left and right side tabs and remove by pulling the tray straight out towards you. (Fig 2 & 3)
6. Remove the old filter from the tray .
7. Put the new filter in the filter-tray with the air-flow arrows pointing up. Make sure the filter is tucked under the tabs (Fig 4)
8. Insert the tray with the clean filter back into the housing and clip the two tabs on the right and left sides of the cover.
9. Raise the glove box while pushing inward on both sides to engage both stoppers.
10. Attached the tension cord
11. Close glove compartment.

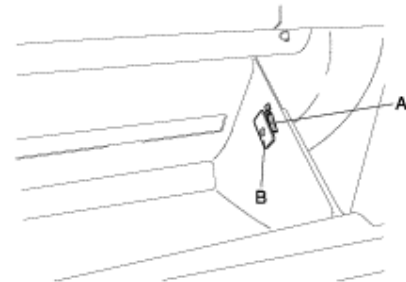


Figure 1



Figure 2



Figure 3



Figure 4