

CABIN AIR FILTER – INSTALLATION INSTRUCTIONS

Part No.: **PC9957X**

Est. Installation Time: **less than 30 mins**

GM OE: 22759203,19338058, 23101674

These vehicles did not come with a cabin air filter from the factory. Must have installed filter kit (GM #22759208) for the filter to be installed

- Remove three screws holding up kick-panel cover (fourth screw deep under center of dash optional o remove) and gently fold cover up to passenger seat to access underneath glove panel (fig 1)
- On the underside of the HVAC case, inboard of the blower motor, locate the groove (2) around the molded-in cabin air filter access panel (1) as shown in the illustration (fig 2)
- Once the molded-in cabin filter access panel is removed, ensure the opening is free of burrs and debris
- Bend the top stage and slowly insert the cabin air filter into the HVAC module, with the filter stages (cut outs) facing inboard while the pull strip is pointed down as shown in the illustrated (Fig 3)
- Install the cabin air filter cover plate hook onto the slot in the HVAC module



Fig 1

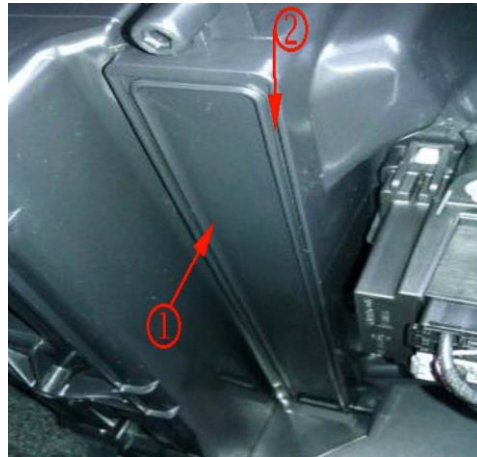


Fig 2

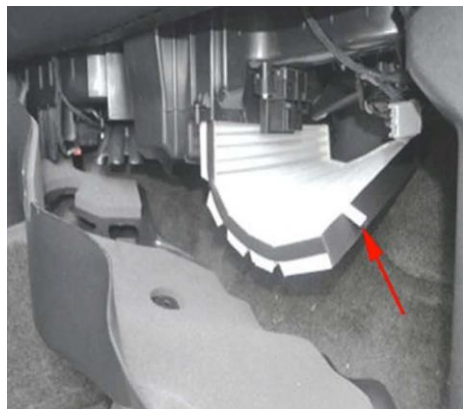


Fig 3

This is only a guide and may not be for exact model. See Owner's manual and/or local mechanic for exact instructions for the particular model.