

CABIN AIR FILTER – INSTALLATION INSTRUCTIONS

Part No.: **PC5459X**

Est. Installation Time: **45 mins**

Honda OE: 80290-S0X-A02

The Cabin air filter is located behind the glove compartment

- Open the glove box
- Remove the stoppers on both sides to allow the glove box to hang freely on the hinges (Fig 1)
- (For First time installation only) Using a fine tooth saw blade or a set of heavy duty wire cutters, cut the plastic cross bar at each end on the perforations to remove and discard. DO NOT CUT THE METAL CROSS BRACE (Fig 2)
- Remove the two 5/16" bolts and two Phillips-head screws on each side securing the metal cross brace and remove brace by sliding down (Fig 3)
- Remove the cabin filter cover by unlatching the bottom first (Fig 4)
- Remove the old cabin air filter, taking note the air flow arrow indicator on the side of the old filter
- Insert the new filter into the assembly, making sure the air flow direction is correct according to the arrow indicator
- Replace the rest of the glove box assembly by reversing the removal procedure



Figure 1

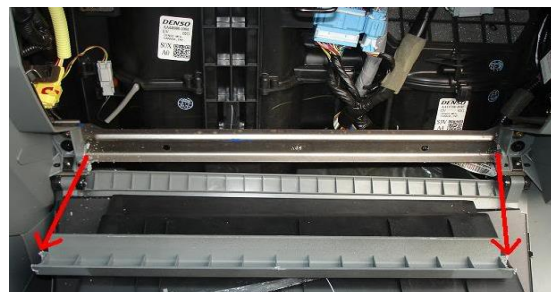


Figure 2



Figure 3

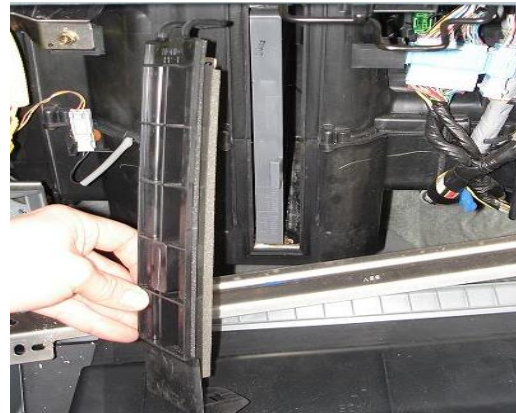


Figure 4

This is only a guide and may not be for exact model. See Owner's manual and/or local mechanic for exact instructions for the particular model.